

Allister/Pulsar Keypad

Reset default setting by pressing ON/RESET then 999#,999#

Push ON/RESET, 1234 * 1


Select a 4 digit PIN number and enter it here _____

Enter ON/RESET, 1234, #,1, (PIN No),(PIN No),#

Find your door code by entering the switch positions from the inside of your transmitter,
+ = 1, 0 = 2, - = 3

Enter ON/RESET, (PIN No), ##, 1 (door code)

To operate your door press ON/RESET, (PIN), *, 1

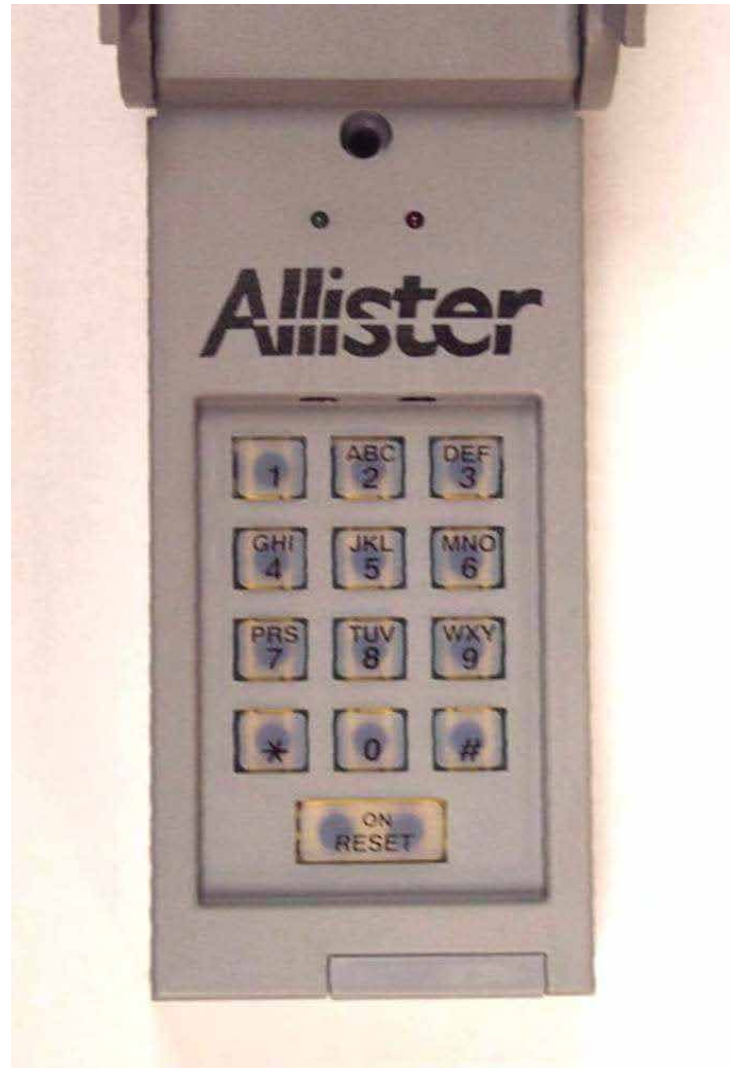

MULTIPLE DOOR INSTRUCTIONS:

It is NOT recommended to use this keypad to open more than one door, but if you must open multiple doors with this keypad please code door #1 with the above instructions before attempting to code doors 2 and/or 3

Press ON/RESET, (PIN No),*, 2 for door number 2
Find your door code by entering the switch positions from transmitter 2,
+ = 1, 0 = 2, - = 3

Enter ON/RESET, (PIN No), ##, 2, (door code)
To operate your door press ON/RESET, (PIN No), *, 2

Press ON/RESET, (PIN No), *, 3 for door number 3
Find your door code by entering the switch positions from transmitter 3,
+ = 1, 0 = 2, - = 3

Enter ON/RESET, (PIN No), ##, 2, (door code)
To operate your door press ON/RESET, (PIN No), *, 3

Works with these transmitters

